

# How to Fit

## an Open Cassette Roller Blind

 
---

### Fitting the Brackets

Carefully unwrap the roller blind and its associated brackets. There are two bracket options for open cassette blinds, face fix and top fix.




Face fix bracket



Top fix bracket

 For a blind up to 1 metre wide attach two brackets fitted approximately 75mm from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule.

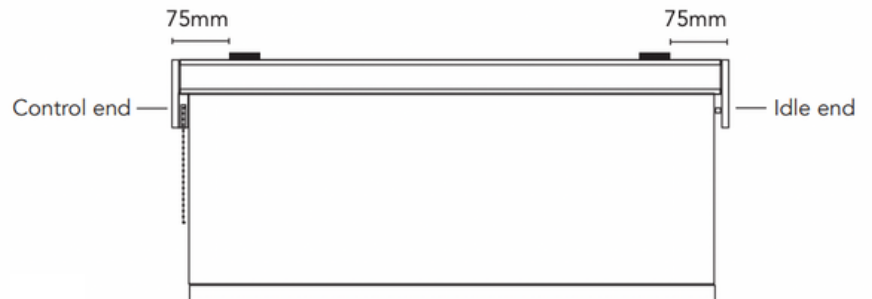

The bracket release lip on the bracket must face the back of the blind.



Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

## Fitting the Cassette

Once all the brackets are in place offer the blind to the brackets. With the cassette tilted away from you locate the front lip into the bracket and push upwards to click the cassette into the back lip of the bracket.



## Child Safety - Easybreak® System

Two Easybreak® connectors are connected to the operating chain 200mm apart. This ensures that at least one of them will be in the vertical position ensuring they perform as required.

If excessive weight is applied within the loop a Easybreak® connector will break apart.

If an Easybreak® connector comes apart then it will need to be re-connected. To re-connect, check the Easybreak® connector for damage. If undamaged, re-connect the chain by inserting the last ball on the end of the chain into the larger hole of the connector and push into place.

