

Pleated Blinds Fitting Instructions

Free Hang Blinds (Rectangular)

Top Fixing Brackets

Fix two brackets to the height of the blind drop and close to the ceiling or lintel, using holes drilled at least 25mm (1") from the wall or window frame and at least 70mm (2 ¾") from each end of the blind. Any remaining brackets should be fixed equidistantly between these first two brackets.

Face or Side Fixing Brackets

Face fix the brackets to the wall or window frame as closely as possible to the ceiling or lintel with the same spacing as recommended for top fixing brackets.

or

Side fix one bracket to the wall either side of the blind. Any remaining top fix brackets should be fixed so that the operation levers are spaced evenly between the end brackets.

Fitting the Headrail

The blind must be fitted with the control cords at the front. Release any cords wrapped around the rails. Angle the headrail so that the groove is at the back slots into the back of the bracket. Push fit the rail into the front of the bracket. Ensure that the internal track cords are clear of the brackets.

Questions?



just call us

0845 652 1963



STYLE STUDIO

Child Safety

Cord Cleat

Remove the cords from the packaging.

Position the cleat a minimum of 1500mm from the floor.



Mark the position of the holes on the cleat



Questions?




just call us

0845 652 1963



STYLE STUDIO

Drill and plug if necessary and attach the cleat to the wall.

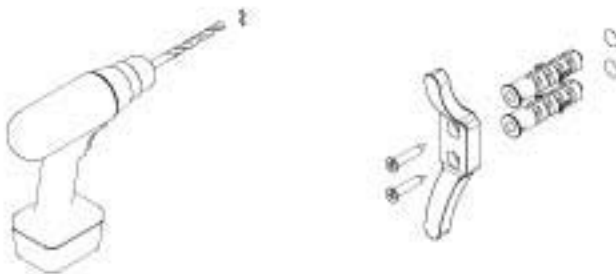

Wrap the cords around the cleat in a figure of eight.



Operating your Free Hang Blinds

To Lower or raise your new pleated blind pull the cord to the centre of the blind and slowly release/pull the cord, keeping the cord lock pulled to the centre of the blind. The cord lock is automatic, just let go of the cord and the blind will stop in that position.

Questions?



just call us

0845 652 1963



STYLE STUDIO