



How to measure for Roller blinds

STEP 1 MEASURING THE WIDTH: Inside recess-

Using a steel tape measure, measure the inside of the recess, this is recess wall to recess wall. You need to do this across the top, middle and bottom of the window recess. see **Fig-A**

MEASURING THE WIDTH: Outside recess-

If you want your blind to cover the whole of the recess of your window you need to add at least 150mm to you inside recess measurements or just measure to the point you want your blind to cover. See **Fig-B**

STEP 2 MEASURING THE DROP: Inside recess-


As above measure from the top of the recess to the window sill. You need to do this across the left, middle and right of the window.

MEASURING THE DROP: Outside recess-


If you want your blind to cover the whole of the recess of your window you need to add at least 120mm to your inside recess measurements or just measure to the point you want your blind to drop to. See **Fig-B**

STEP 3 TAKING YOUR MEASUREMENTS:

Always write down your measurements as 'width and then drop'. On an inside recess measurement use the smallest measurement from your 3 measurements you have taken. This will ensure a perfect fit. Don't forget, the most accurate type of measuring is done in millimetres.

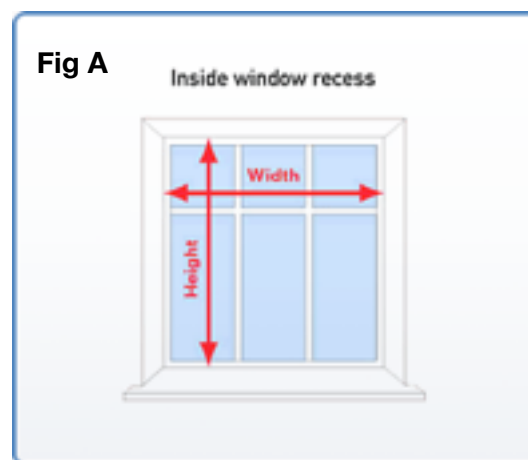

NOTE: The three options for roller blinds are blind size (width includes brackets), recess size (when measuring for inside recess) and cloth size. Cloth size means the actual coverage of the roller cloth, the operating mechanism and brackets will be 38mm wider than the cloth. You would choose this when measuring for outside recess.

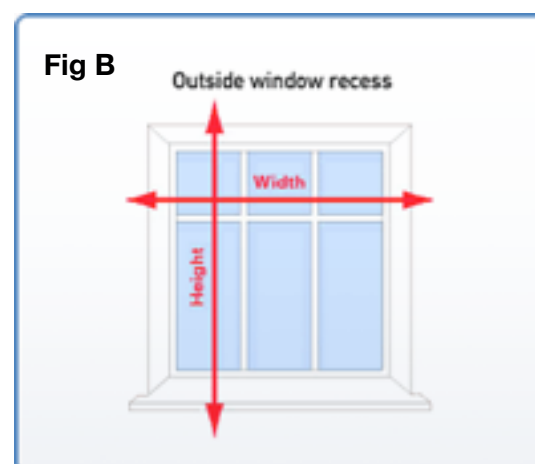

Questions?



just call us 0845 652 1963

Helpful Guides