



1. Slide a fixing bracket, flat face up, onto the tool. Ensure the bracket is slid on all the way on, until the top face hits the ledge on the tool, and the centres of all the holes on the bracket are aligned with the hole on the tool.



2. Take the tool and bracket to the window recess. Butt the flat vertical face of the tool against the outer face, and hold the bracket against the top face of the recess approximately 100mm in from either side of the recess.



3. Keeping the tool in place, either drill a pilot hole through the centre of the holes on the bracket, or - if fitting to a suitable substrate - directly drive a screw up into the recess until tight. Ensure the tool stays flat and square against the recess while doing this. Once the screw is tight, the tool can be pulled out of the bracket. *NOTE: The use of wall plugs is recommended where appropriate.*



4. Repeat steps 1 - 3 at the opposite side of the recess. Additional brackets can be evenly spaced and used as centre supports by following these recommendations:

- Widths up to 800mm require 2 brackets.
- Widths up to 1.5m require 3 brackets.
- Widths up to 2m require 4 brackets.



5. Enter fascia into top brackets as shown and snap firmly into place. (Check fascia is flush with recess edge.)



6. The end caps can move outwards 10mm at each side, which can take up any small gaps between the headrail and the side of the recess that may appear due to mis-measurement.

To Remove Blind



1. To remove blind, fully raise and grip both the fabric roll and the fascia with each hand. Rotate the entire blind downward slightly in the direction shown to open the top fix brackets.

2. While holding the blind in this position, pull it down and away from the brackets.

Questions?



just call us

0845 652 1963




STYLE STUDIO

Fitting Instructions

Senses Face Fitting Instructions



1. Take the tool to the window and butt the square edges into the window recess, so that the arrows point horizontally away from the window.

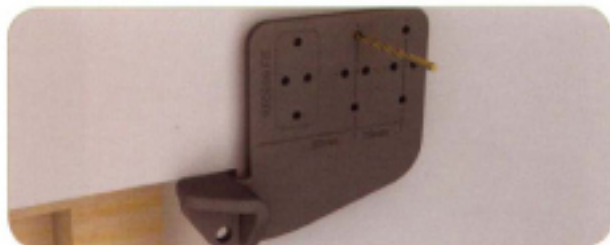

2. Pick the required overlap: 22mm (marked 'recess fit'), 50mm or 765mm. Keeping the tool in place, drill into the fitting surface using a 3mm bit through 2 of the 4 grouped holes. Where centre support is required, position tool in centre of window and drill required holes. *It is recommended to use the top and bottom holes where possible.*



3. Remove the tool, revealing the two holes. Take the bracket to the holes and line them up within the slots on the bracket base. Insert screws into the holes and tighten. Using the top and bottom slots allows for sideways adjustment of the bracket before completely tightening. Repeat for additional brackets and centre supports.

Please note that the use of wall plugs is recommended where appropriate.



4. When all brackets have been fitted insert blind by lining up fascia end caps with slots on fixing brackets. Adjustment of fascia end caps can be used to aid this process. When both sides have been located ensure blind is pushed fully home until locks on both the fixing brackets and centre support have been snapped in to place.

To Remove Blind
Use following methods according
to accessibility of brackets



1. Using flat blade screwdriver, release locking clip as shown and pull fascia away from bracket.

OR



2. Using flat blade screwdriver, release locking clip by inserting screwdriver between bracket and end cap.

Questions?



just call us

0845 652 1963



STYLE STUDIO