


How to assemble your Perfect Fit® blind (Pleated, Cellular & Venetian)

To assemble your Perfect Fit® blind, there is a simple assembly procedure to follow before fitting may commence. Carefully unwrap the blind components. Unravel all guides and control cords. The blind will have the top and bottom parts of the frame attached together with cord.

- 1 Lay out the blind face down on a clean, even surface.



- 2 Select the left hand frame component and guide onto the exposed arm of the bottom left corner joint.

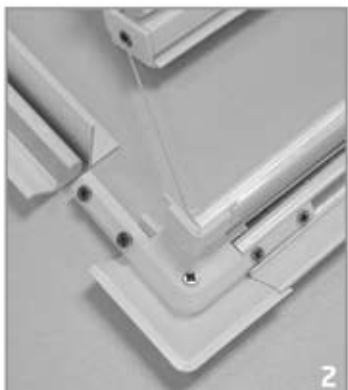

How to assemble your Perfect Fit[®] blind (continued)

- 3 Slide the frame along the arm until secure. Repeat the process on the top left hand corner joint.
Now follow the same procedure for the right hand side of the frame. Once the frame is complete tighten the securing screws attached to each corner joint.



- 4 Your Perfect Fit[®] blind is now ready to be fitted.



Need Help? Call us on **0845 652 1963**