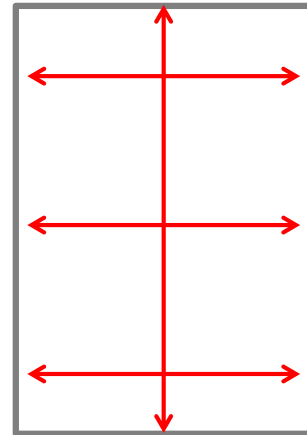


Survey Instructions

Measurements:

Note: Measure the glass size only.

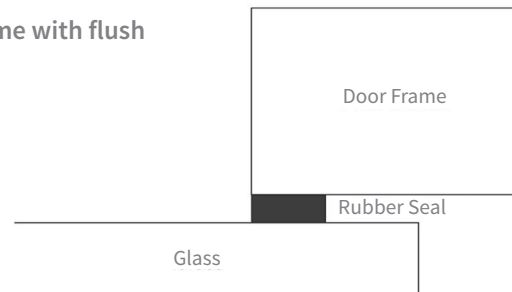
- Measure the visible glass width at 3 different points as shown.
Use the smallest measurement as the blind width.
- Measure the drop
(ensure sizes are within specification as per table below)



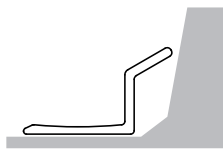
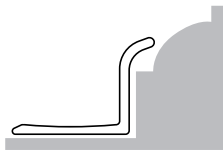
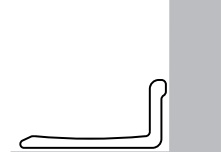
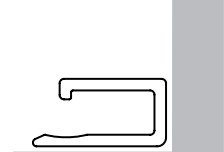
Tensioned Bead Fit/Guided Bead Fit			
Max Width	1000mm	Min Width	250mm
Max Drop	2400mm	Min Drop	250mm
Max Area	2m ²	Min Bead Depth	N/A

- Check the frame & rubber seal type
(see diagram below)

**Square Frame with flush
rubber seal
Yes or No?**



- Using the survey kit, select side profile that best fits the frame
Ensure that back face of side profile sits flat against the glass

TYPE AXL	TYPE CXL	TYPE DXL	GUIDED
			

- Fill out the information collated above on the relevant order form